KONICA MINOLTA

bizhub C353/C253/C203

Shortcut Manual

KONICA MINOLTA

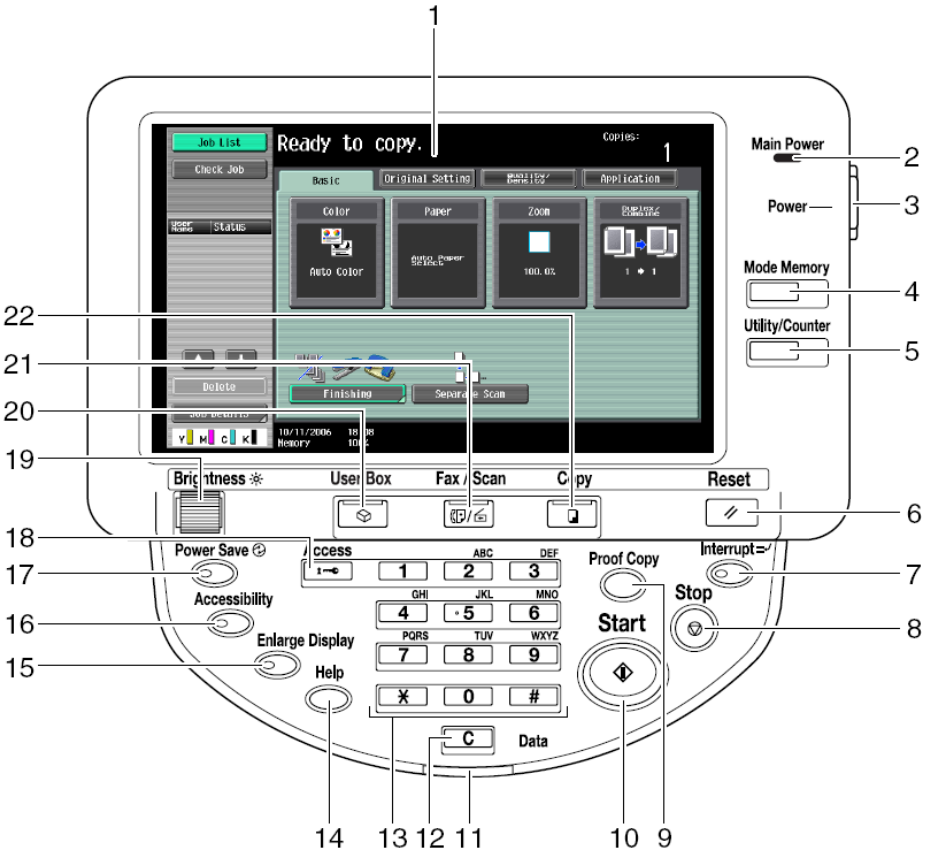

1. **Touch Panel**
2. **Main Power**
3. **Power**
4. **Mode Memory**
5. **Utility/Counter**
6. **Reset**
7. **Interrupt**
8. **Stop**
9. **Proof Copy**
10. **Start**
11. **Panel**
12. **“C” Clear**
13. **Keypad**
14. **Help**
15. **Enlarge Display**
16. **Accessibility**
17. **Power Save**
18. **Access**
19. **Brightness**
20. **User Box**
21. **Fax / Scan**
22. **Copy**

Basic (I)

-- Color Mode

1. **Auto Color** – This setting to automatically detect the documents are in color or black and white

2. **Full Color** – The copy in full color

3. **Black** – The copy in black and white

4. **2 Color** – Print all areas of the document determined to be in color with the specified color, and print all areas determined to be black in black

5. **Single Color –** Print copies in the specified color, regardless of whether the document is in color or in black and white

Basic (II)

-- Paper

Change Bypass Tray Setting

1 Touch **Basic**, Touch **Paper**
2 Select Bypass Tray
3 Touch **Change Tray Settings**
4 Select Paper Type

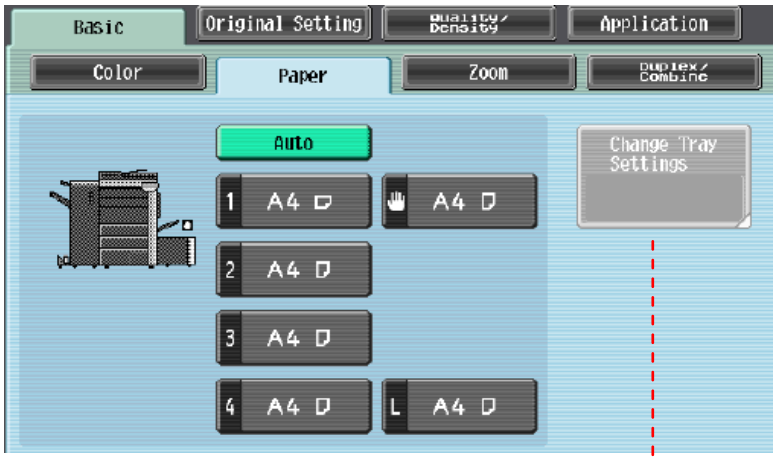

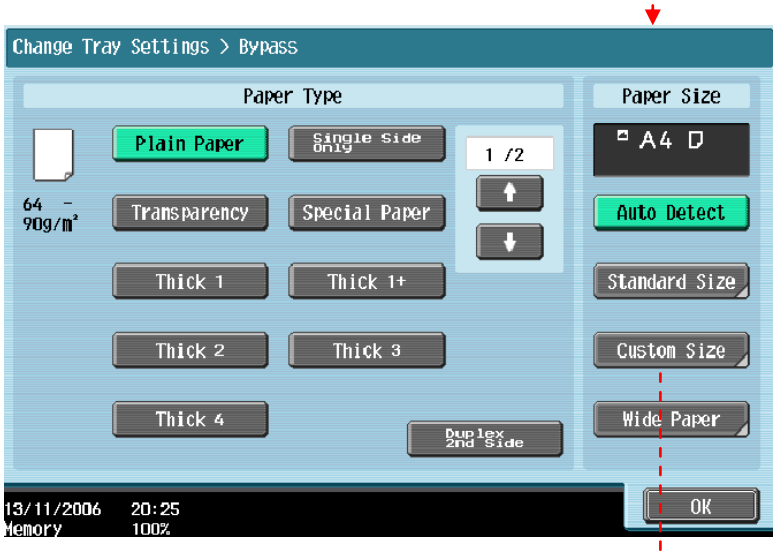

5 Input paper size
  a Touch **Standard Size**
  b Touch **Custom Size** input (Length) **X** and (width) **Y**，e.g. 90mm please input 0900 (If stored paper size，touch **Store**， then choose Memory1 -5)
6 Touch **OK**

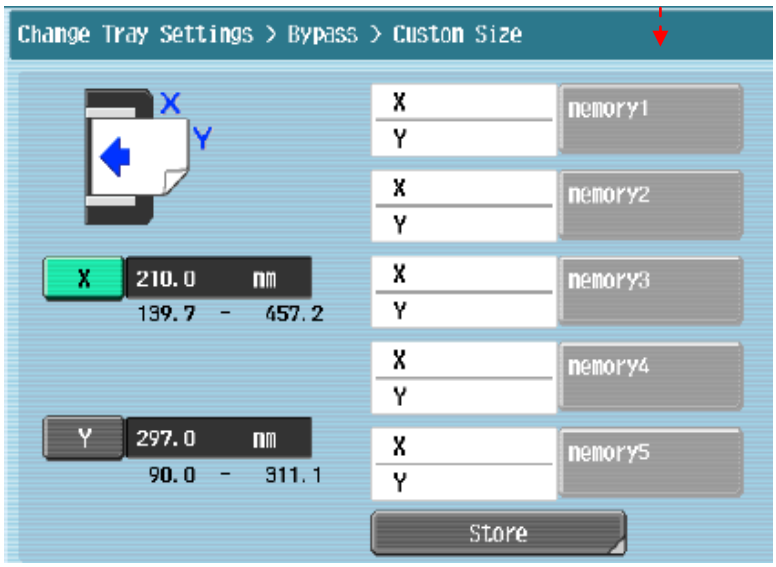

Basic (III)

-- Zoom

Touch **ZOOM**

1 Select fixed zoom size

a Touch default zoom ratios
e.g. : **A3 ▸ A4** default zoom ratio is 0.707

b Touch **—** **+** to change zoom ratio

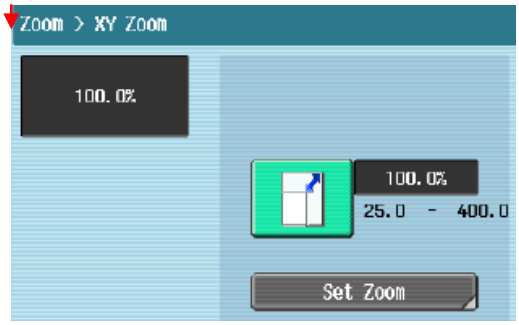

2 Touch **XY Zoom**
Using the keypad，type in the desired zoom ratio then touch **OK**

Sort / Group

1. Touch **Finishing**
2. Touch **Sort** or **Group**

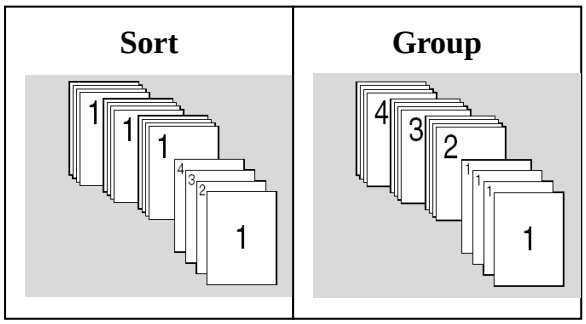

3. Touch **Start**

Offset

1. Touch **Finishing**
2. **Offset** touch **Yes**
3. Press **Start**

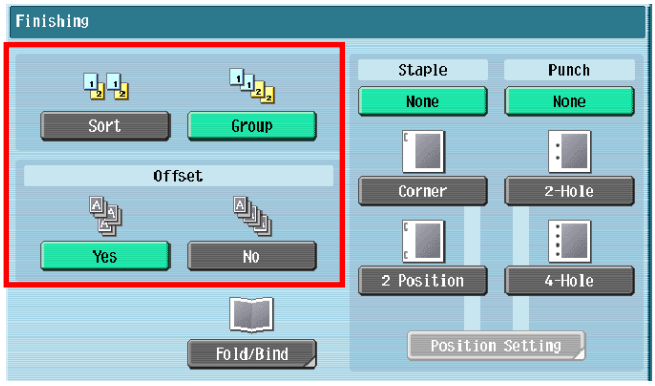

(Optional Function)

Staple

1. Touch **Finishing**
2. At **Staple** select **Corner** or **2position**
3. Touch **position Setting**
4. Press **Start**

Punch

1. Touch **Finishing**
2. At **Staple** select **2 Hole** or **4 Hole**
3. Touch **position Setting**
4. Press **Start**

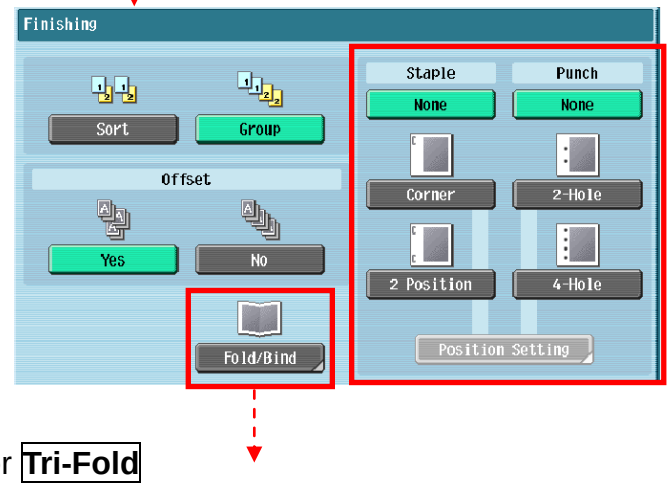

Fold/Bind

1. Touch **Finishing**
2. At **Fold/Bind** select **Yes**
3. Touch **Half-Fold** **Center Staple & Fold** or **Tri-Fold**
4. Press **Start**

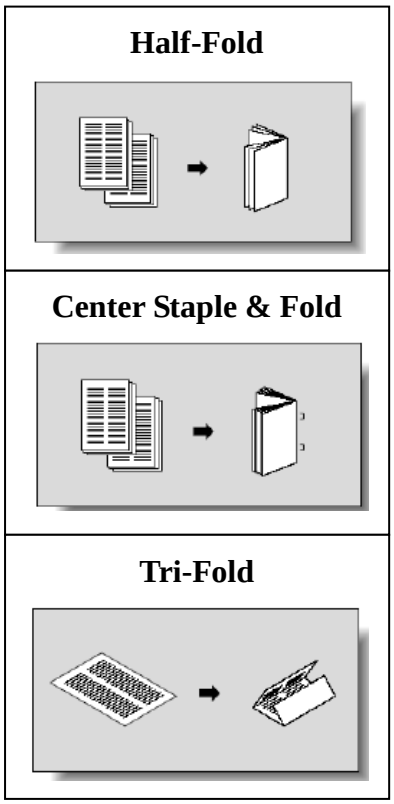

Basic (IV)

--Duplex/Combine

Select Combine

1. Touch **2 in 1** **or**

2. Touch **4 in 1/ 8 in 1**

To reduce the size from 2 / 4 / 8 sheets originals into 1 sheet of copy

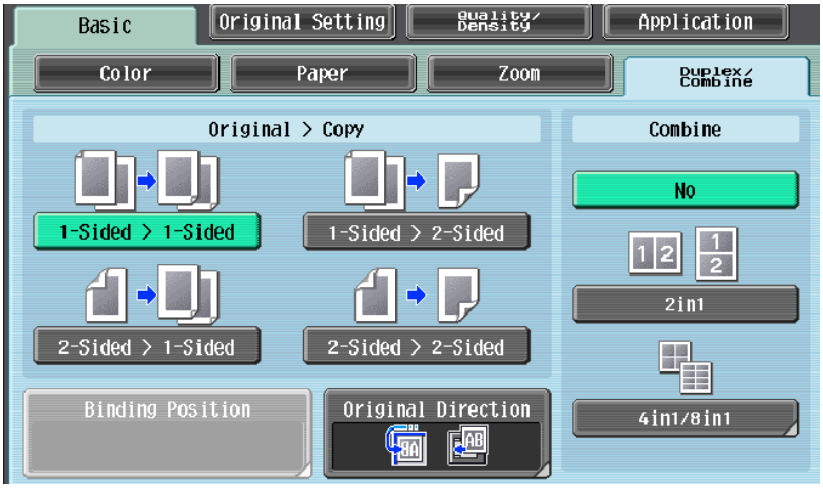

Original ＞ Copy

a. 1-sided > 2-sided Single-sided Original to Double-sided Copy

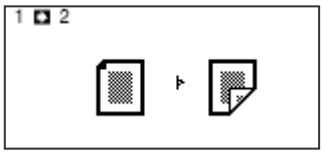

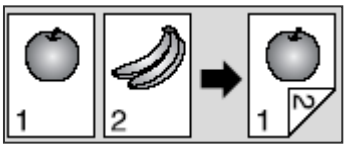

b. 2-sided >1-sided Double-sided Original to Single-sided Copy

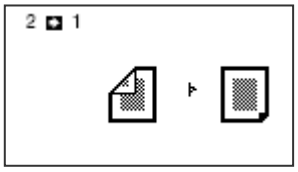

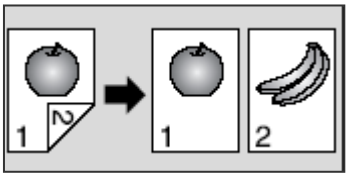

c. 2-sided >2-sided Double-sided Original to Double-sided Copy

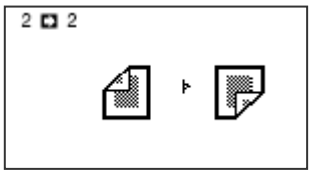

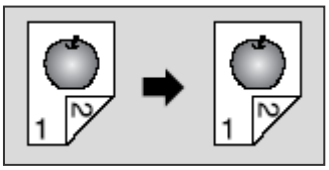

KONICA MINOLTA

Original Setting

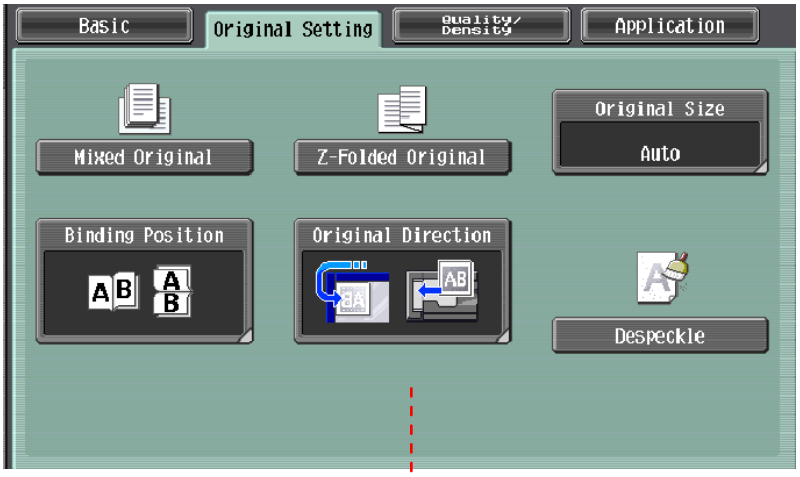

1. Touch **Mixed Original** automatically detect the documents size and automatically choose paper tray

2. Touch **Z-Folded Original** (Optional Function)

3. Touch **Binding Direction** -- copy-binding direction

4. Touch **Original Direction** – select original direction

5. Touch **Original Size** -- select original size

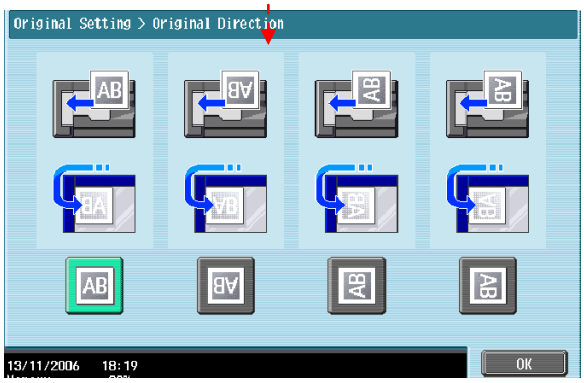

Quality/Density

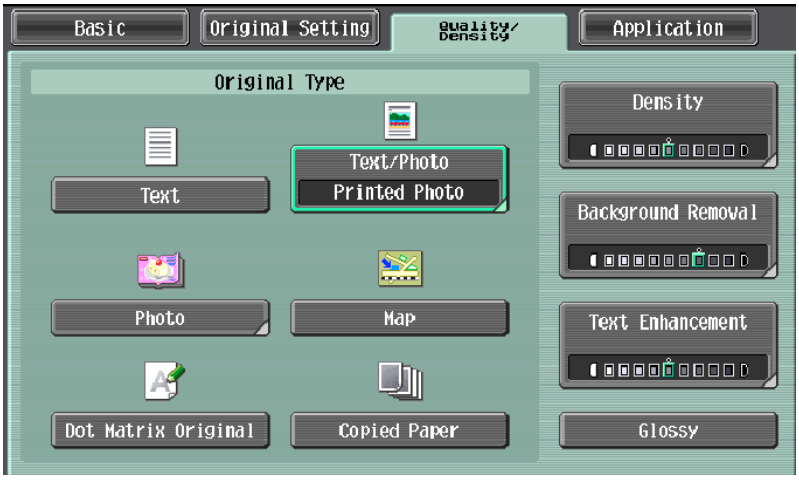

1. Select **Original Type** to choose **Text**, **Text/Photo**, **Photo**, **Map**, **Dot Matrix Original** or **Copied Paper**

2. Touch **Density** – the print image can be adjusted, each time [Lighter] or [Darker] is touched, the density is lightened or darkened by one level.

3. Touch **Background Removal** – the density of the background color of the document can be adjusted, each time [Light] or [Dark] is touched, the background density is lightened or darkened by one level.

4. Touch **Text Enhancement** – select the reproduction quality of text when copying documents consisting of text that overlaps images such as illustrations or graphs

5. Touch **Glossy** – select this setting when copying images with a glossy finish

Application

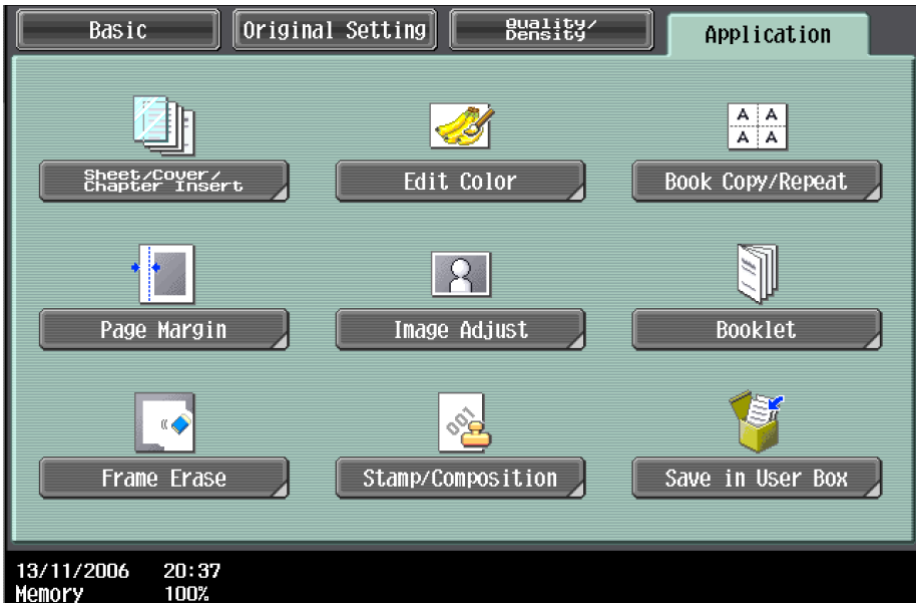

- OHP Interleave

1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **OHP Interleave**
4. Select inserting paper tray
5. Load OHP transparencies into the bypass tray
6. Touch **OK**
7. Press **Start**

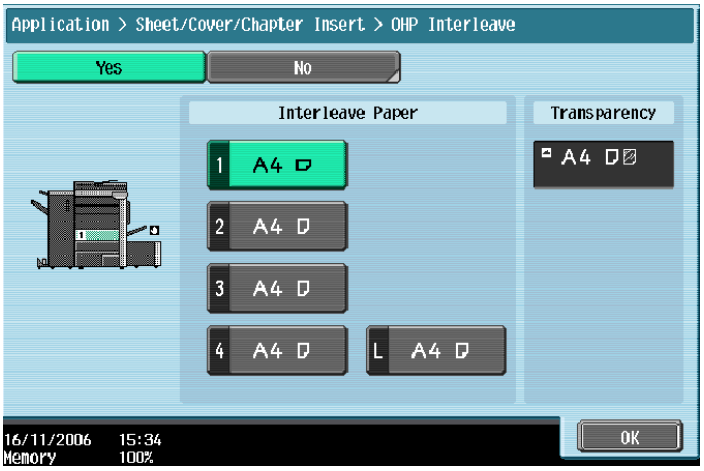

KONICA MINOLTA

- Cover Mode

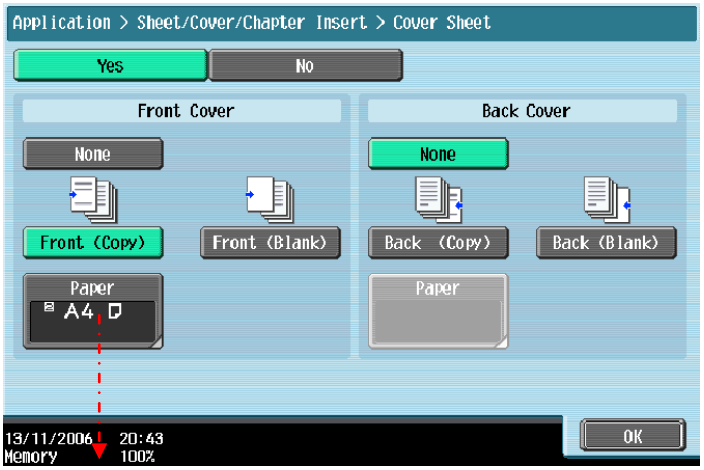

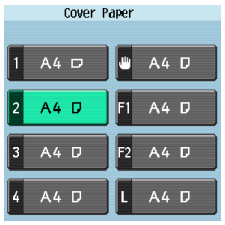

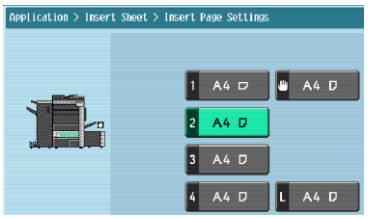

1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **Cover Mode**
4. Select Front Cover or Back Cover
5. Select Front or Back Cover paper tray
6. Touch **Ok**
7. Press **Start**

- Insert Sheet

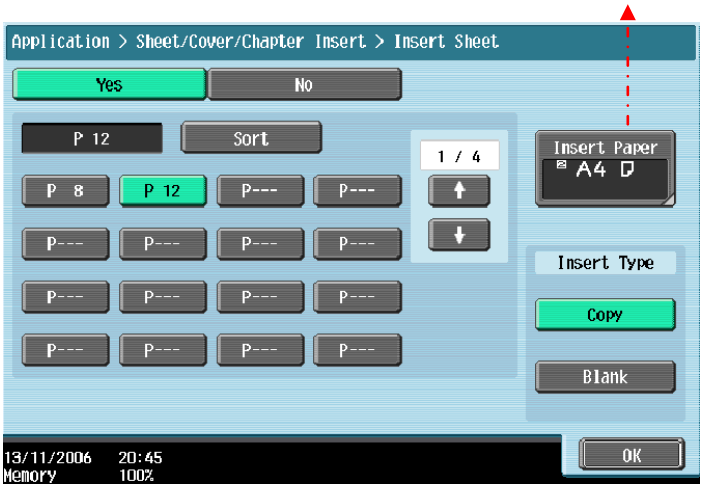

1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **Insert Sheet**
4. Touch **Copy** or **Blank** select inserted pages are printed or not
5. Select the paper tray loaded with the paper for the insertion sheets
6. Touch **Ok**
7. Press **Start**

- Insert Image

1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **Insert Image**
4. Select inserted image pages number
5. Touch **Ok**
6. Press **Start**
7. Final，Touch **Finish** then press **Start**

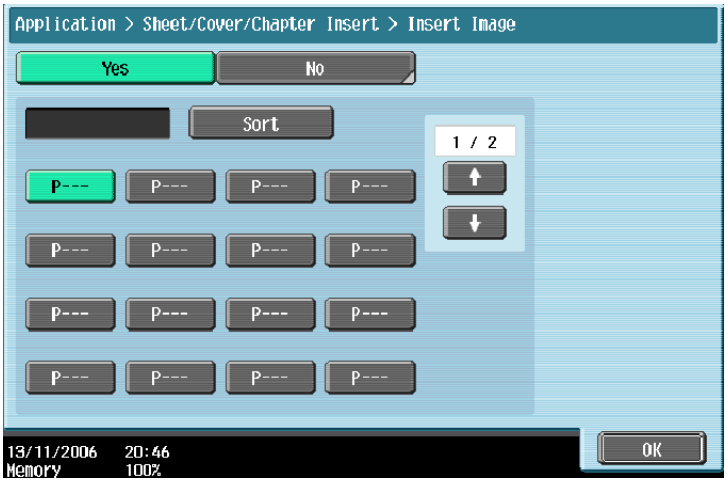

- Chapter (Duplex Only)

1. Touch **Application**
2. Touch **Sheet /Cover /Chapter Insert**
3. Touch **Chapter**
4. Select inserted image pages number
5. Touch **OK then press Start**

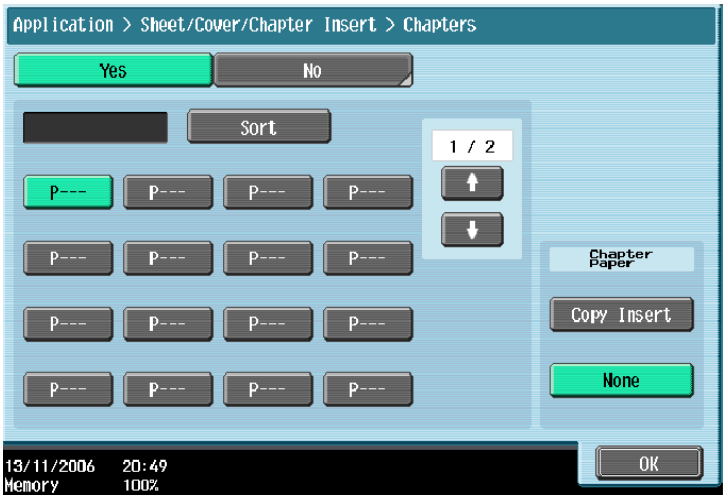

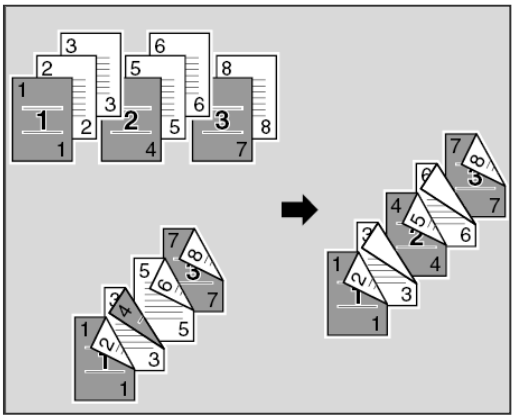

KONICA MINOLTA

- Edit Color

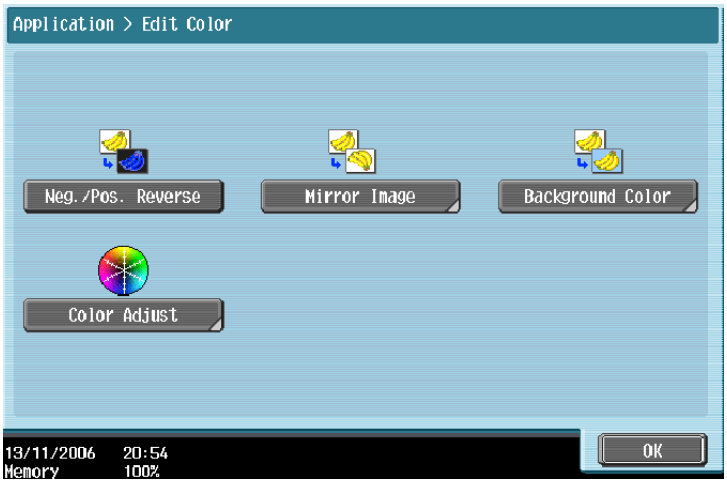

1. Touch **Application**
2. Touch **Edit Color**
3. Touch **Neg. Pos. Reverse**

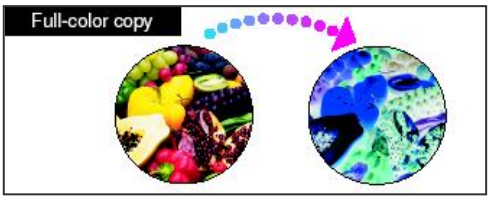

4. Touch **Mirror Image**

5. Touch **Background Color**

- Book Copy

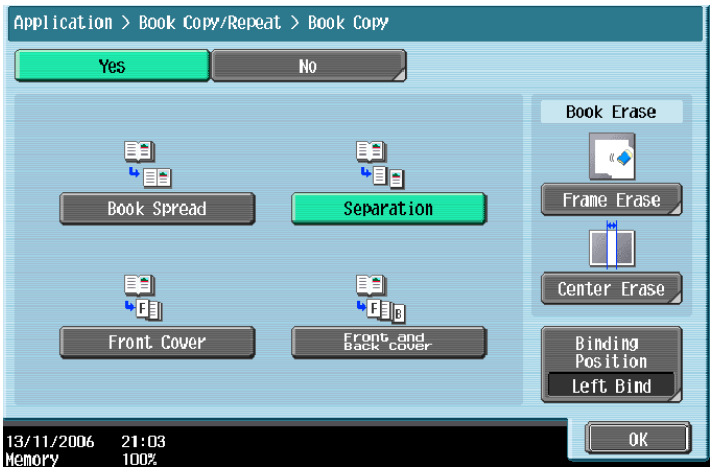

1. Touch **Application**
2. Touch **Book Copy / Repeat**
3. Touch **Book Copy**
4. Then touch **Separation**，select **Front Cover/Back Cover**
5. Open book，Touch **Start**
6. Scan whole book pages then press **Finish**
7. Press **Start**

If select Front Cover, scan：

- The front cover is scanned, and all page spreads are scanned in order

If select Front Cover & Back Cover，scan：

- The front cover is scanned before the back cover, and all page spreads are scanned in order

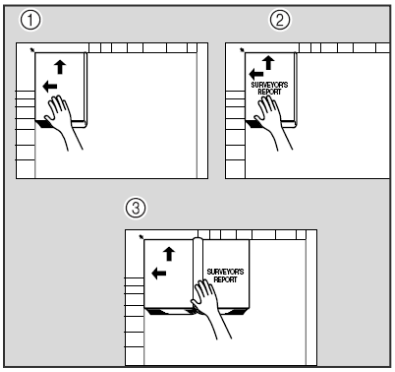

KONICA MINOLTA

- Image Repeat

1. Touch **Application**
2. Touch **Book Copy / Repeat**
3. Touch **Image Repeat**
4. Select **With Margin / Without Margin**
5. Touch **Set Range**
6. Touch **Custom Size** ，
   Input X (Length) and Y(Width)
7. Touch **OK**
8. Press **Start**

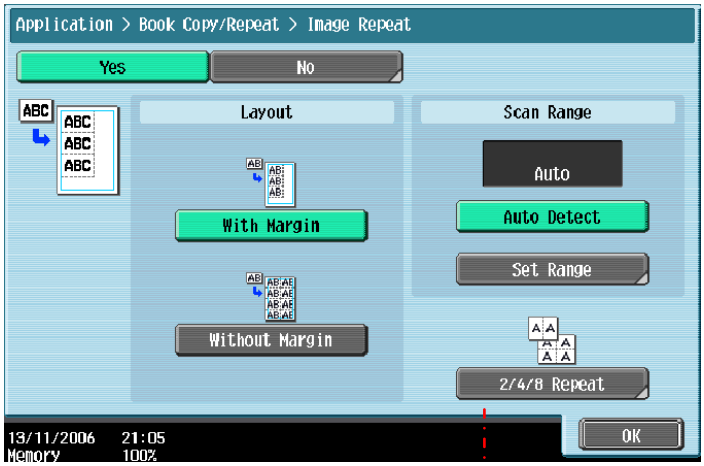

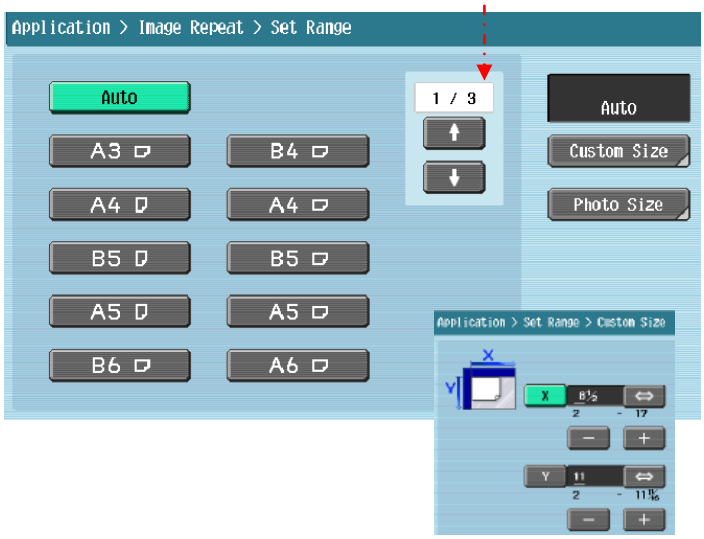

- Poster Mode

1. Touch **Application**
2. Touch **Book Copy / Repeat**
3. Touch **Poster Mode**
4. Touch **Zoom** ， Select zoom ratio
5. Touch **OK**
6. Press **Start**

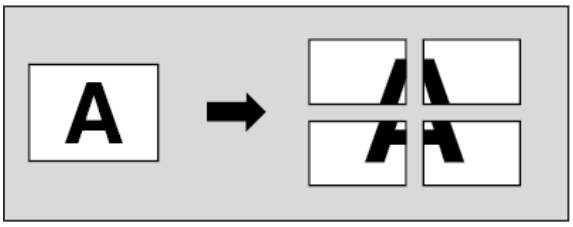

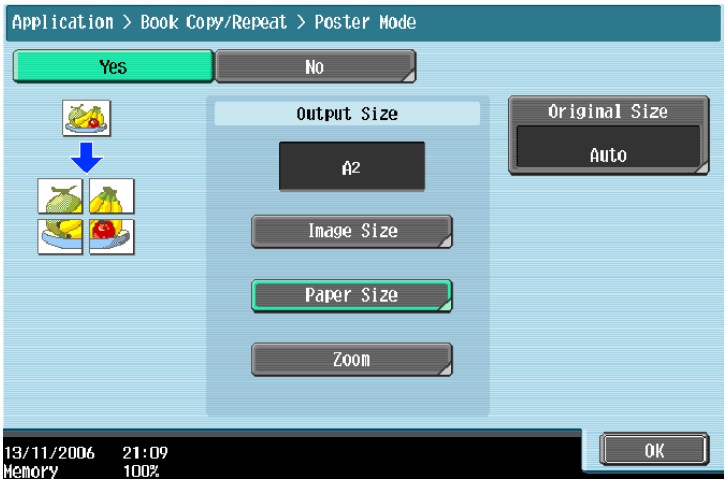

KONICA MINOLTA

- Booklet Original

Optional Function

1. Touch **Application**
2. Touch **Book Copy/Repeat**
3. Touch **Booklet Original**
4. Touch **OK**
5. Press **Start**

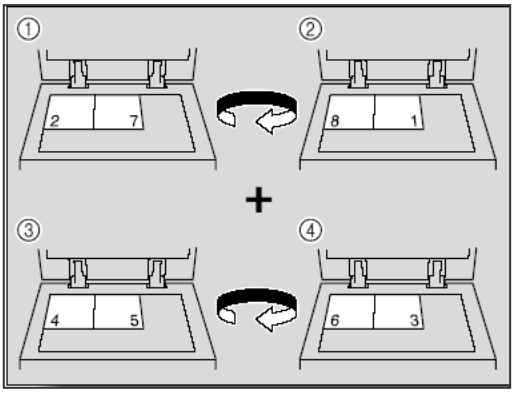

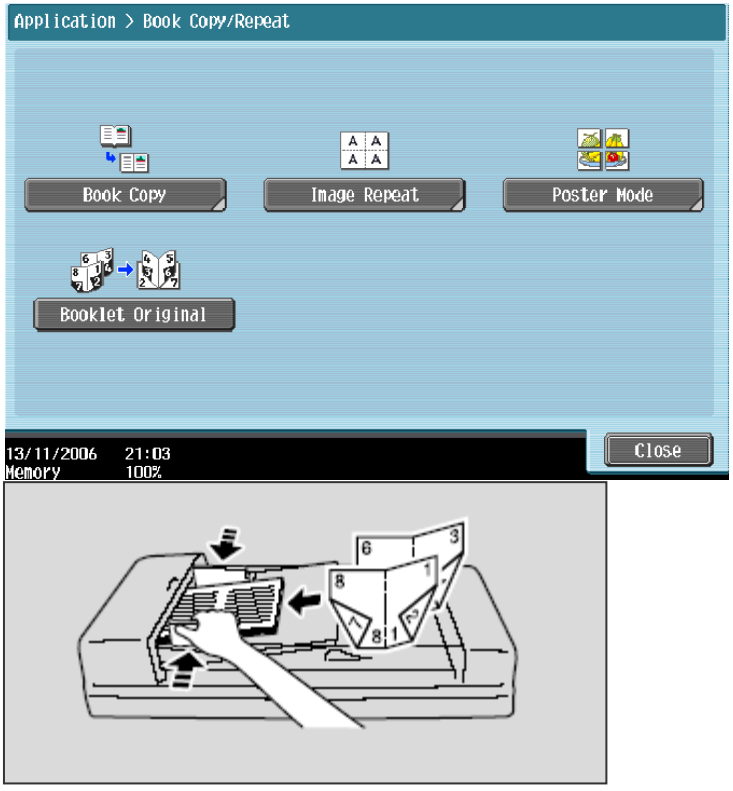

- Page Margin

1. Touch **Application**
2. Touch **Page Margin**
3. Select **Top**, **Left** or **Right**
4. **Adjust Value** input width
5. Touch **OK**
6. Press **Start**

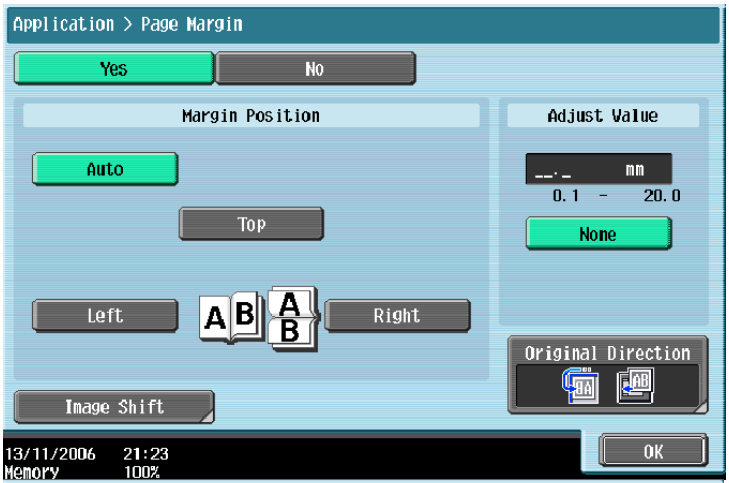

- Frame Erase

1. Touch **Application**
2. Touch **Frame Erase**
3. Input width
4. Touch **OK**
5. Press **Start**

- Booklet

1. Touch **Application**
2. Touch **Booklet**
3. Select **Left Binding /Right Binding**
4. Press **Start**

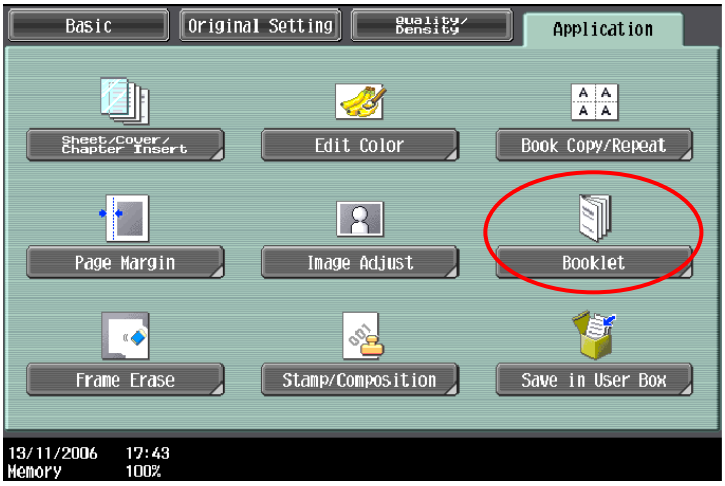

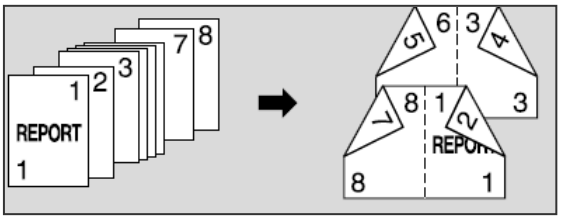

- Image Adjustment

1. Touch **Application**
2. Touch **Image Adjust**
3. Select **Full Size** **Center Zoom** or **Centering**
4. Press **Start**

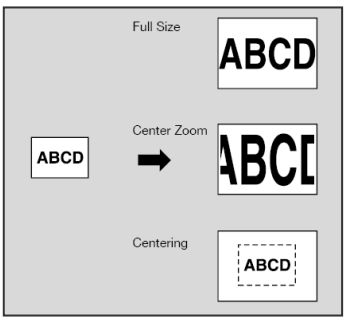

- Date / Time

1. Touch **Application**
2. Touch **Stamp/Composition**
3. Touch **Date / Time**
4. Touch **Print Position** -- print to different position
5. Touch **OK**
6. Press **Start**

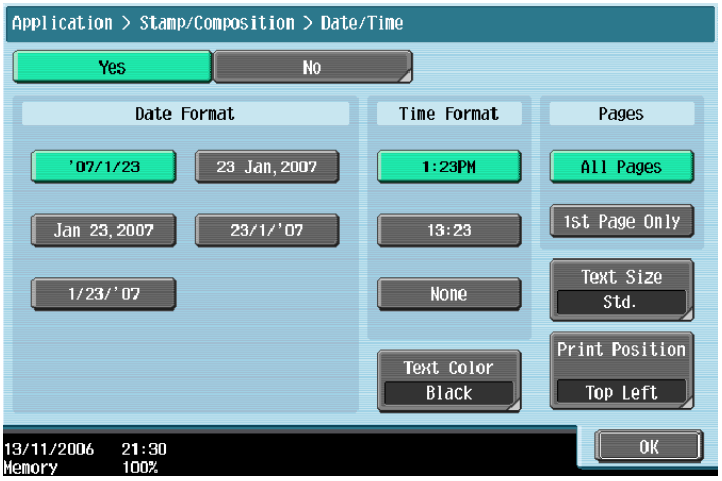

- Page

1. Touch **Application**
2. Touch **Stamp/Composition**
3. Touch **Page Number**
4. **Starting Page Number** input starting page number
5. Touch **Print Position** – print to different position
6. Touch **OK**
7. Press **Start**

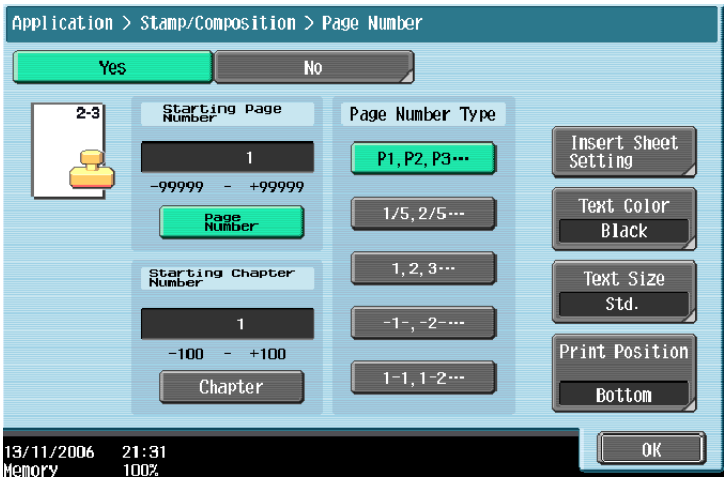

- Copy Protect

1. Touch **Application**
2. Touch **Stamp/Composition**
3. Touch **Copy Protect**
4. Touch **Preset Stamp** ，or touch **Date/Time** or Touch **Detail Setting** select color
5. 按 **OK**
6. 按 **Start**

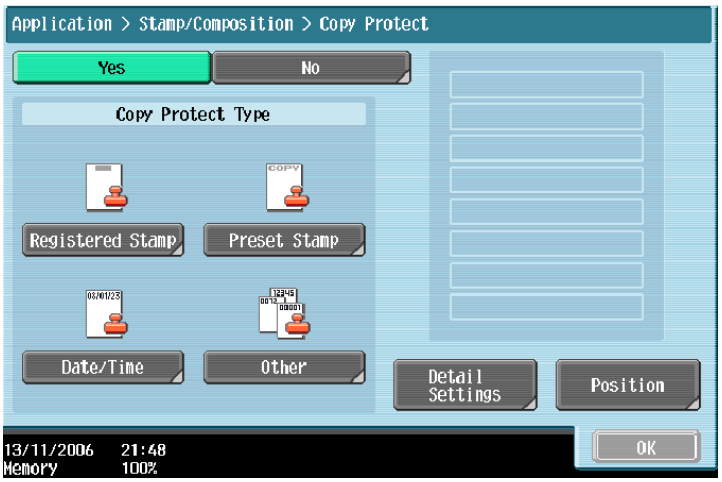

Delete the copy jab in the Waiting List

1. Touch **Job Details**
2. Touch **Print** and then touch **Current Jobs**
3. Select the job you want to delete
4. Touch **Delete**
5. Touch **Yes** to delete printing job

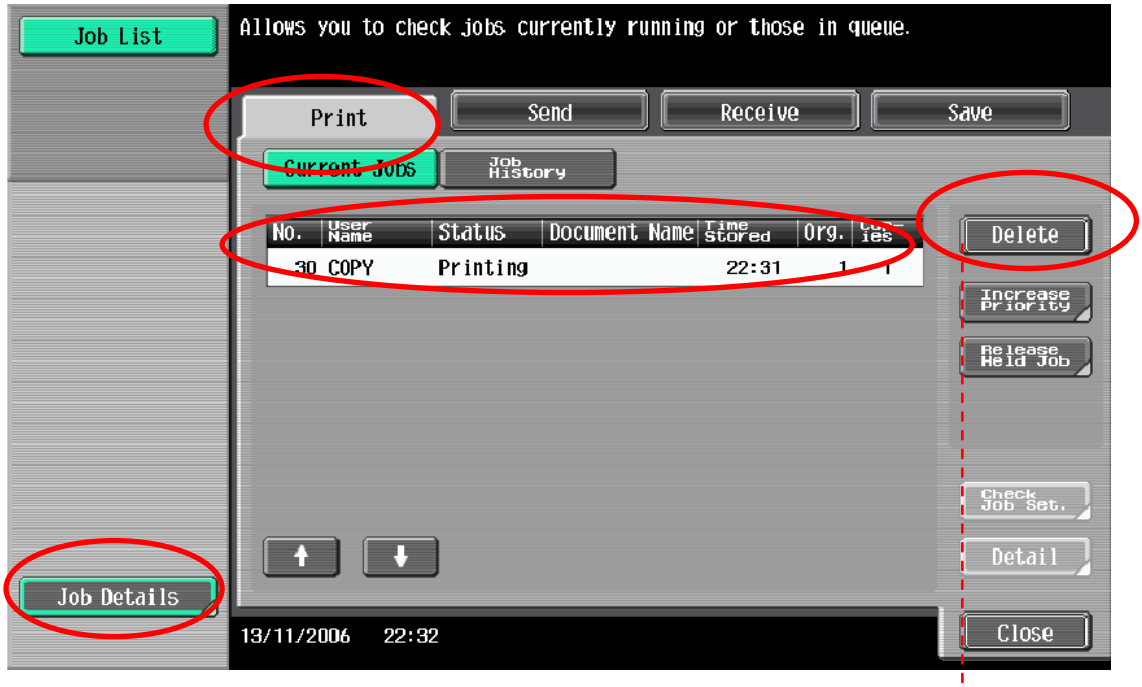

KONICA MINOLTA

Abbreviated Destinations

E-mail / Fax

1. Press **Utility/Counter**
2. Touch **1. One Touch/User Box Registration**
3. Touch **1. Create One Touch Destination**
4. Touch **1.Address Book**
5. Touch **E-mail** / **Fax**
6. Touch **New**
7. Touch **Name**，Input name，Touch **OK**
8. Touch **Address** input e-mail address or Fax number，Touch **OK**
9. Touch **Index**，Select Favorites or other index
10. Touch **OK**

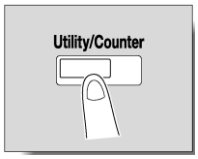

1.

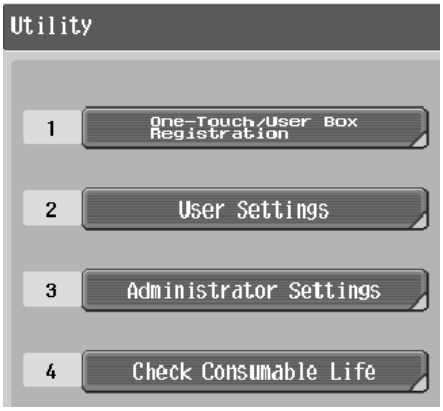

2.

3.

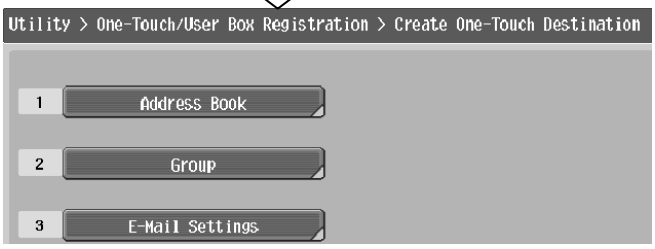

4.

5.

6.

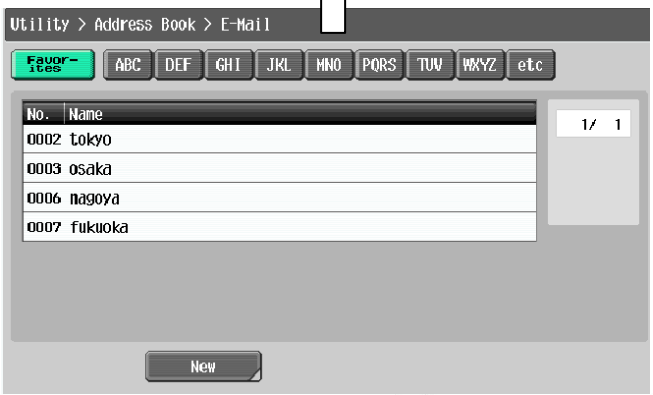

7.

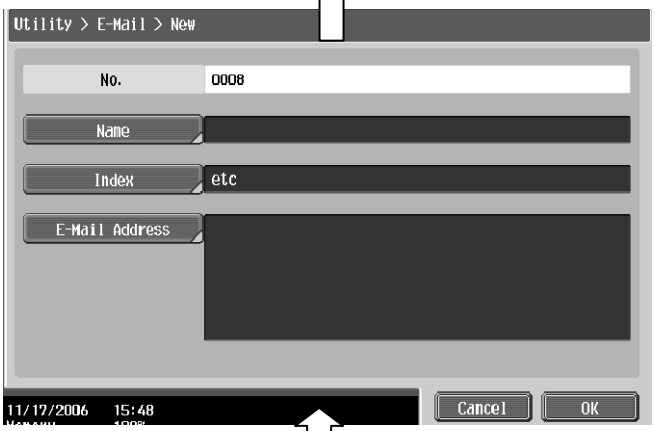

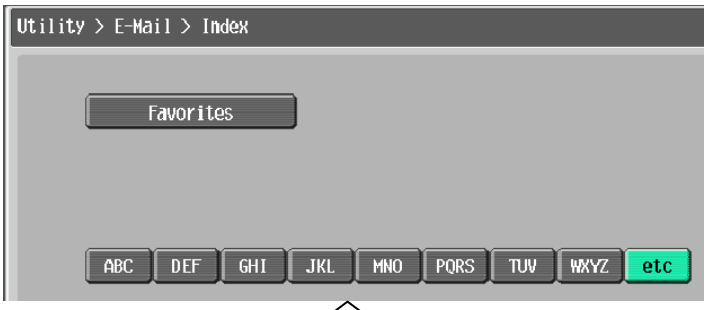

Group Registration

1. Press **Utility/Counter**
2. Touch **1. One Touch/User Box Registration**
3. Touch **1. Create One Touch Destination**
4. Touch **1.Group**
5. Touch **New**
6. Touch **Name**，Input group name，Touch **OK**
7. Touch **Select Group** (If fax, select Fax)
8. Touch **OK**

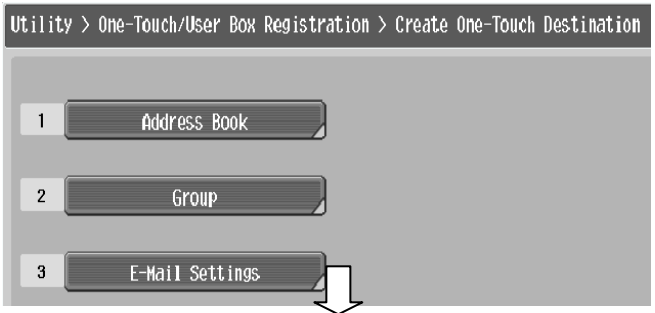

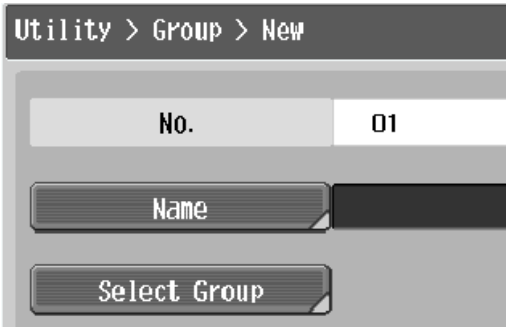

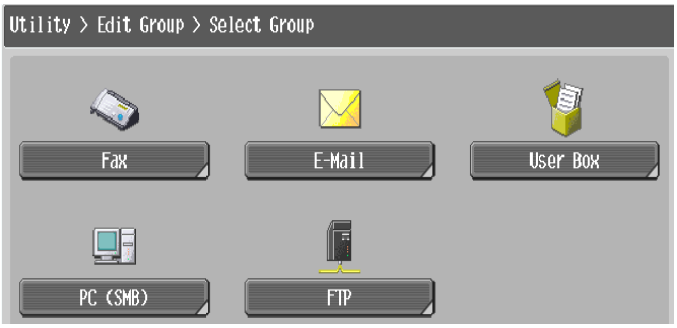

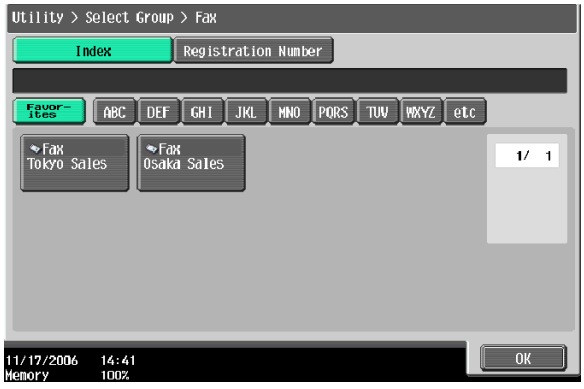

Scan To Email / Send Fax

1. Press **Fax/Scan**
2. Touch **Address Book**
3. Select one-touch Index and Name
4. Touch **Scan Settings**
   A. Original Type select original type
   B. Simplex/Duplex select original single-sided or double-sided
   C. Resolution
   D. File Type
   E. Density
   F. Quality Adjustment

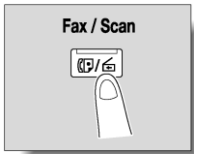

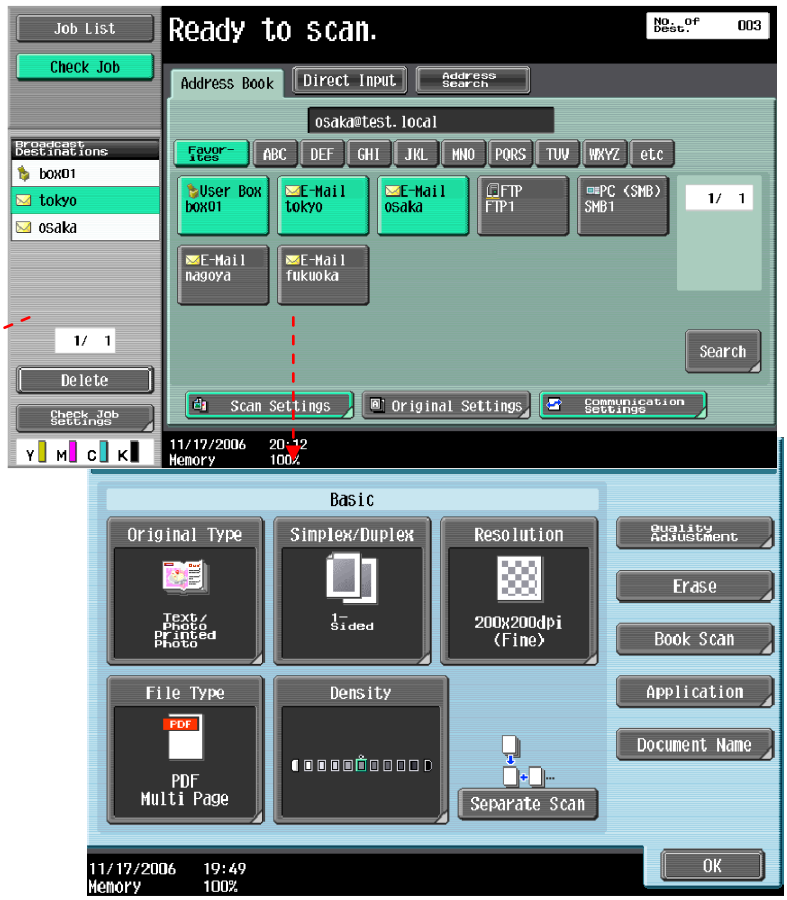

5. Touch check following setting

   A. Destination Settings
   B. Check Scan Settings
   C. Check Original Settings
   D. Check E-mail
6. Then, Press **Start**

remark :

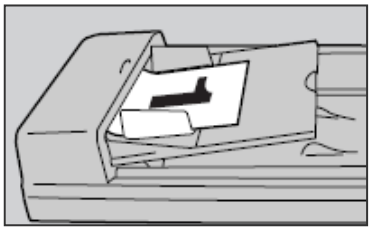

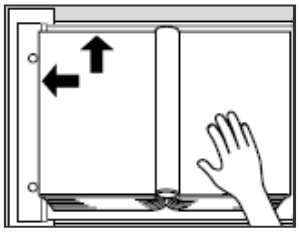

- When use scan or fax, put original on the feeder (FACE UP) or glass (FACE DOWN)
- Compact PDF just use for Full Color mode
- TIFF just for Black mode
- File Type not use for Fax function
- Check E-mail Setting just use for Scan to Email

Remove Jammed Paper

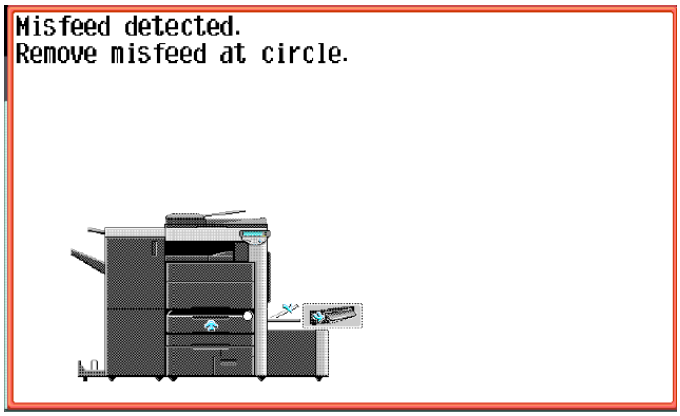

1. Pull up the upper right side door release lever, and then open the upper right side door

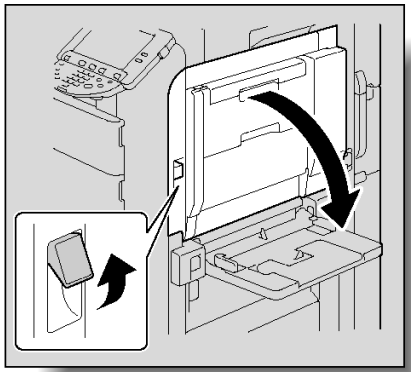

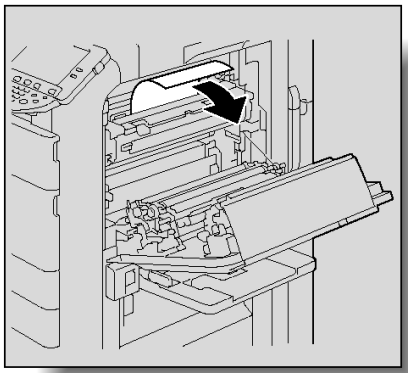

2. Open the door of the automatic duplex unit

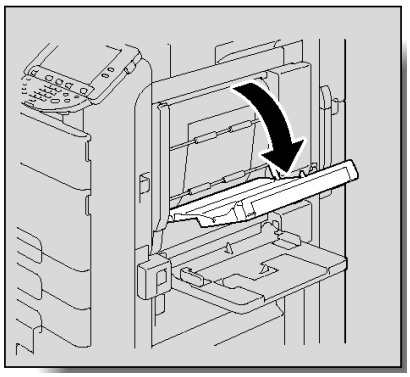

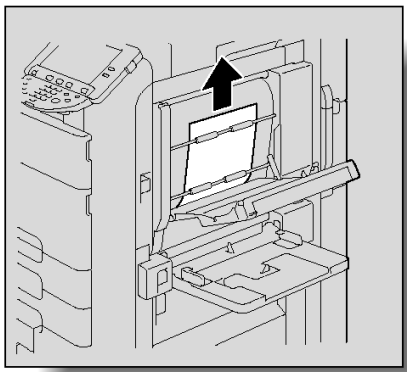

3. Open the door of the Bypass Tray

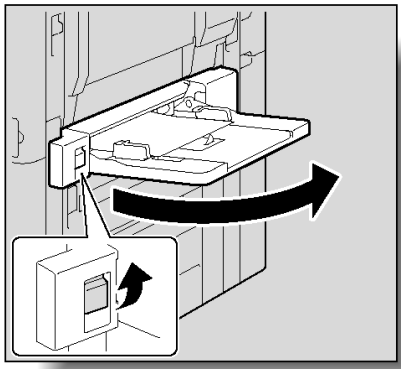

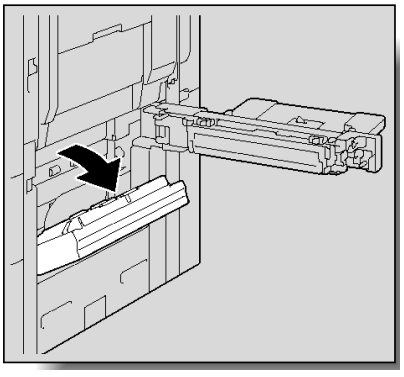

KONICA MINOLTA

Replace Toner

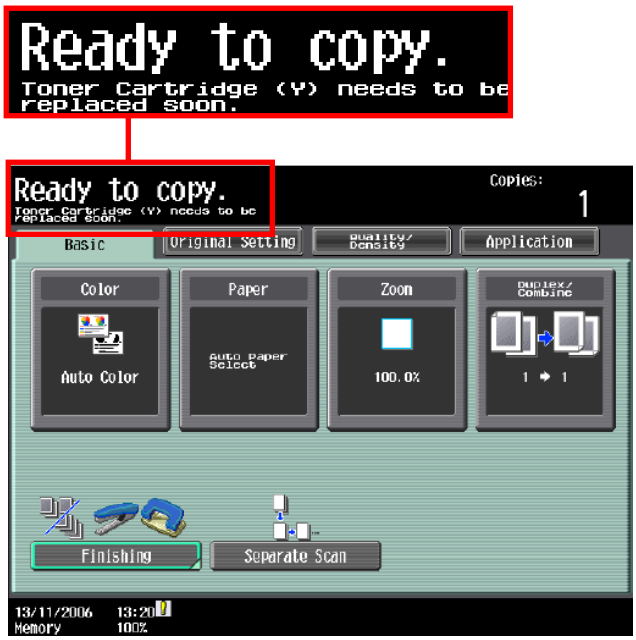

*If toner near empty，Screen will show toner empty message

*

- Toner Cartridge (**Y**) = Yellow
- Toner Cartridge (**M**) = Magenta
- Toner Cartridge (**C**) = Cyan
- Toner Cartridge (**K**) = Black

Open the machine’s upper front door, pull out empty toner cartridge toner then insert the new toner

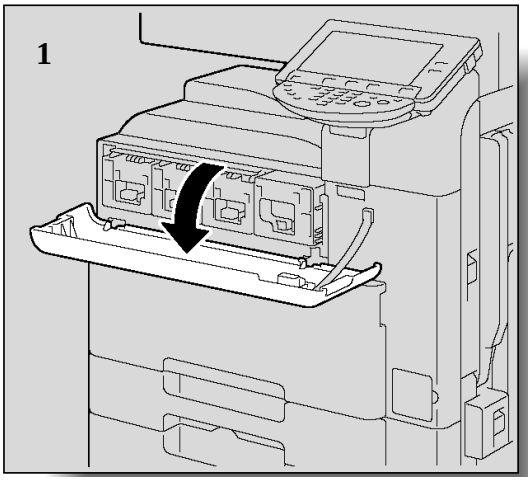

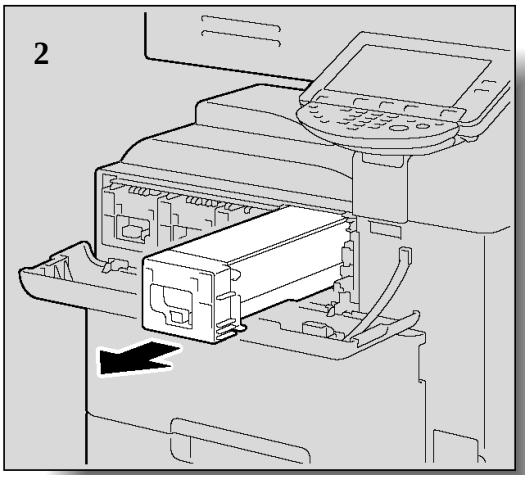

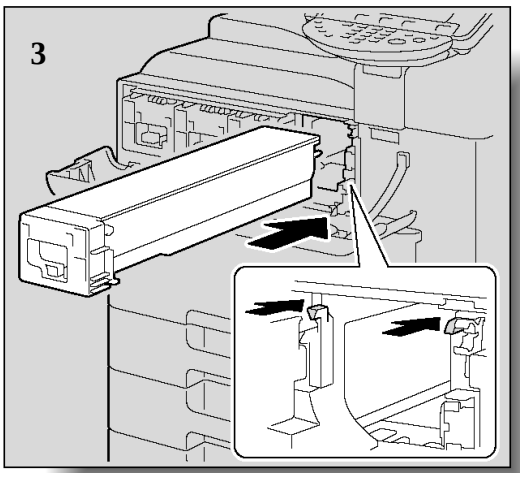

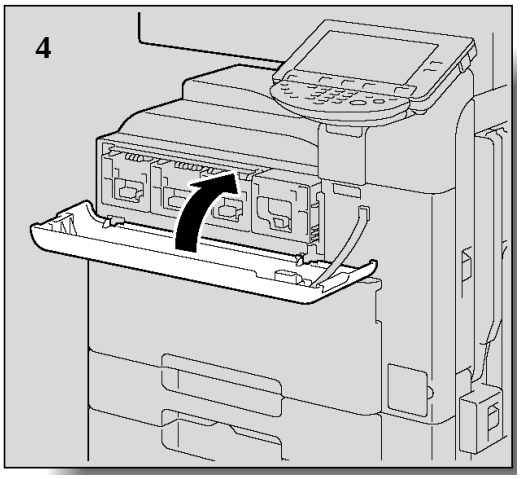

KONICA MINOLTA

Display the Job History List

1. Touch **Job Details**
2. Touch **Send**
3. Touch **Job History**
4. Touch **Comm. List**
5. Select report Type
   A. Activity Report
   B. TX Report
   C. RX Report
6. Press **Start**

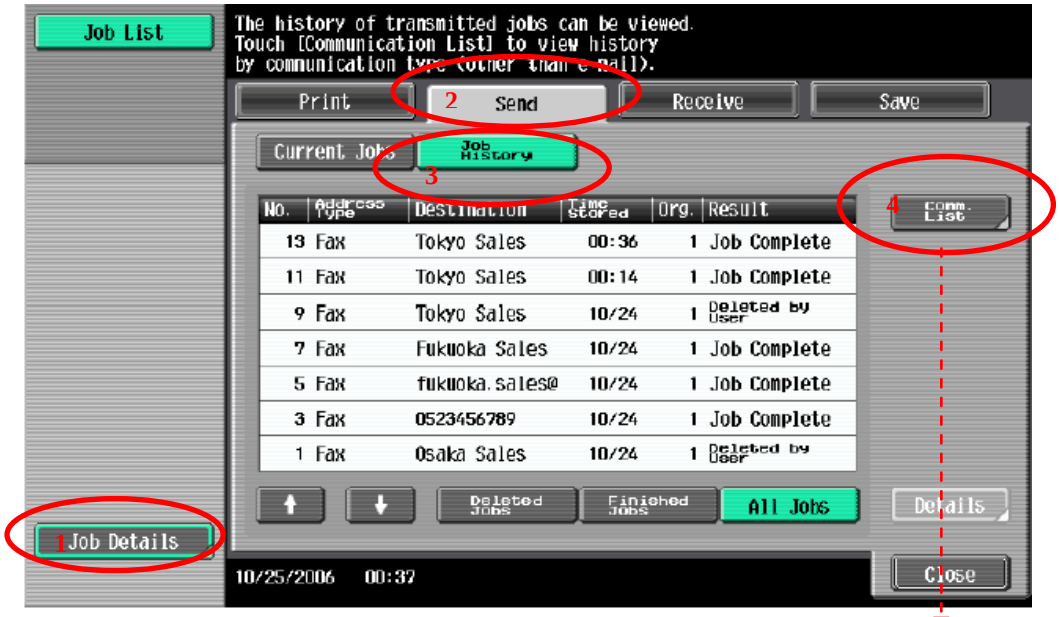
Job List
The history of transmitted jobs can be viewed.
Touch [Communication List] to view history
by communication type (other than e-mail).
Print
2 Send
Receive
Save
Current Jobs
Job History
3
No. | Address Type | Destination | Time Stored | Org. | Result
13 Fax Tokyo Sales 00:36 1 Job Complete
11 Fax Tokyo Sales 00:14 1 Job Complete
9 Fax Tokyo Sales 10/24 1 Deleted by User
7 Fax Fukuoka Sales 10/24 1 Job Complete
5 Fax fukuoka.sales@ 10/24 1 Job Complete
3 Fax 0523456789 10/24 1 Job Complete
1 Fax Osaka Sales 10/24 1 Deleted by User
4 Comm. List
Deleted Jobs
Finished Jobs
All Jobs
Details
1 Job Details
10/25/2006 00:37
Close

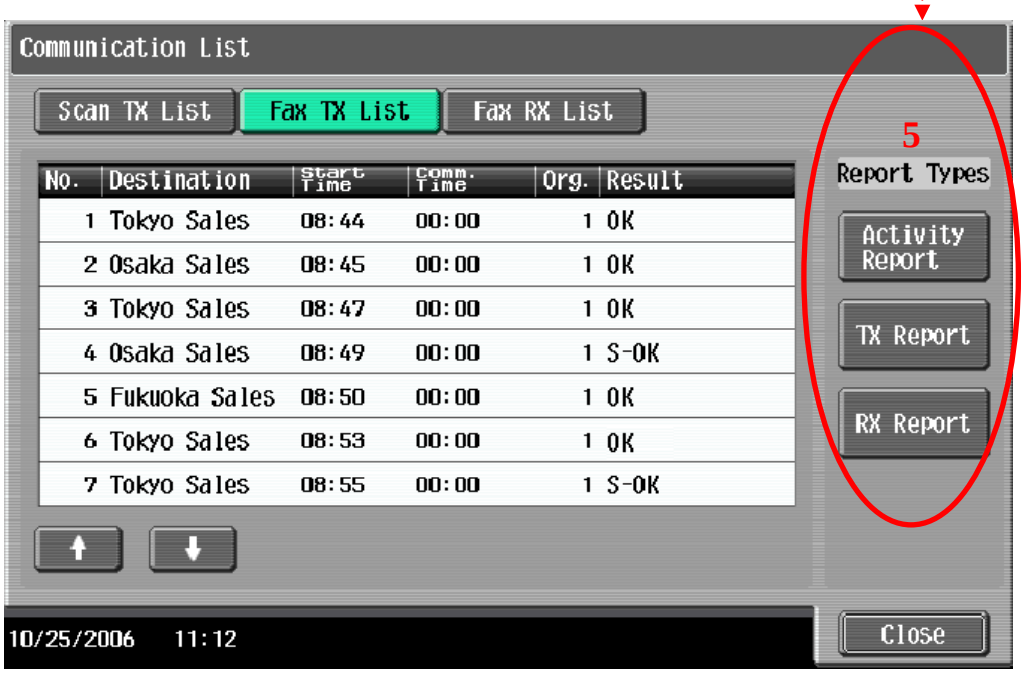
Communication List
Scan TX List
Fax TX List
Fax RX List
No. | Destination | Start Time | Comm. Time | Org. | Result
1 Tokyo Sales 08:44 00:00 1 OK
2 Osaka Sales 08:45 00:00 1 OK
3 Tokyo Sales 08:47 00:00 1 OK
4 Osaka Sales 08:49 00:00 1 S-OK
5 Fukuoka Sales 08:50 00:00 1 OK
6 Tokyo Sales 08:53 00:00 1 OK
7 Tokyo Sales 08:55 00:00 1 S-OK
5
Report Types
Activity Report
TX Report
RX Report
10/25/2006 11:12
Close

KONICA MINOLTA

After print，FAX to 2565 2128

1. Touch **Utility / Counter**
2. Touch **Check Details**
3. Touch **Print List**
4. Select paper tray
5. Press **Start**

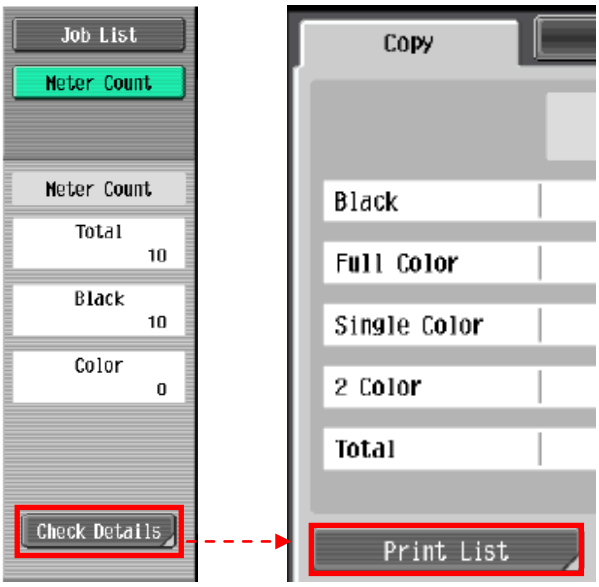

Konica Minolta Color Copier Banner Print C451

Visual PCL Driver (version2.58)

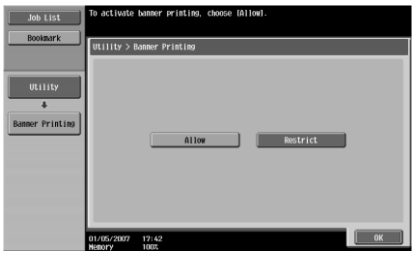

Banner Paper Printing User Guide

Banner paper size: (Width) 210 - 296mm /

(Length) 457.3 –1200mm

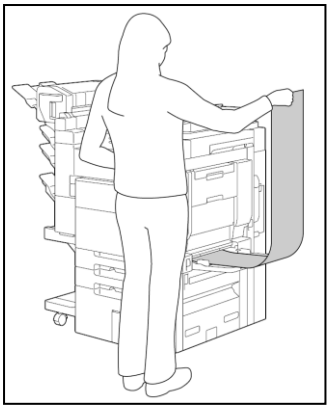

☑ Prepare printing on Banner Paper

1. Press **[Utility/ Counter]**
2. Touch **[6 Banner Printing]**
3. Touch **[Allow]**，then touch **[OK]**

🖳 Printer Driver Setting

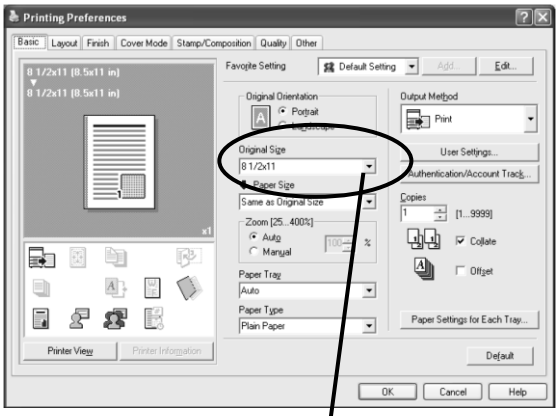

4. Open the file，Click C451 printer driver
   (e.g. Konica Minolta C451)
5. Click **[Preferences]**
6. Click **[Basic]**
7. Click **[Original Size]** drop-down list, select
   [Custom size] then input Width and Length
   e.g. : 296mm x 1143mm

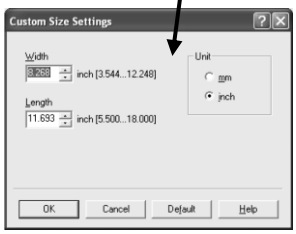

8. Click **[Output Size]** select **[Same as Original Size]**

** Printer Driver automatically select to Bypass tray
and Paper type automatically select to Think 3

9. Click **[OK]**

🖷 Printing Banner Printing

10. Specify the desired settings，then touch [**OK**]
11. Feed the banner paper to Bypass Tray
12. When printing is finished, touch **[Exit]**
13. Touch **[Yes]**
14. Then touch **[OK]** to finish banner-printing function

Pic.1

Pic.2

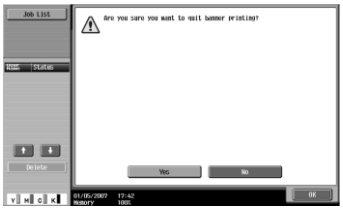

The essentials of imaging

KONICA MINOLTA

Supplementary Notes

KONICA MINOLTA

Supplementary Notes

KONICA MINOLTA

部門熱線Particulars	聯絡方法Contact us
市務科 **Marketing Division** ➢ 銷售熱線Sales Hotlines • 查詢產品及銷售詳情 New Product and Sales Enquires	電話Tel : 2565 2111 電郵Email : bhkg_sales@bhk.konicaminolta.hk
服務科 **Technical Service Division** ➢ 維修熱線Repair Hotline • 多功能產品之維修服務 MFP Repair Services	電話Tel : 2565 2176 傳真Fax : 2856 1024
服務科 **Technical Service Division** ➢ 產品之技術支援熱線 • 軟件及網絡支援 Application, Network and System Support	電話Tel : 2565 2178
客戶服務**Customer Service Department** ➢ 客戶服務熱線 Customer Service Hotlines • 保養合約查詢 Maintenance Agreement • 新客戶之產品培訓 New Customer Product Training • 賬單查詢 Invoice Enquiries • 報錶 (請於報錶結算日前報讀。) Report meter reading through telephone system (Please report meter reading on or before cut-off date)	電話Tel : 2565 2190 傳真Fax : 2565 2128 電話Tel : 2856 4306 電話Tel : 2565 8181 English - Press “2”, then press “2”, 中文 - 按 “1” 字然後按 “2”字 傳真Fax : 2856 2008 電郵Email : bhkg_csmeter@bhk.konicaminolta.hk
客戶服務 **Customer Service Department** ➢ 用品供應熱線 Order Section Hotlines • 訂購消耗品如碳粉及影印紙 Ordering of Consumable Products (Toners, Paper, etc…)	電話Tel : 2565 2139 傳真Fax : 2565 7613 電郵Email : bhkg_csorder@bhk.konicaminolta.hk
財務科 **Finance Division** ➢ 月結單查詢 Statement Enquiries	電話Tel : 2856 4710 傳真Fax : 2516 9177
行政科 **Administration Department** ➢ 客戶的建議及意見反映 Other Suggestions & Comments	電話Tel : 2565 8181 按Press “ 0 ”
網上客戶服務 Online Support Services	http://www.konicaminolta.hk/hk/zh-hk/customer-services.php http://www.konicaminolta.hk/hk/en-us/customer-services.php